

# **Type B Gas Vent Systems**



# **Table of Contents**

About		RWB	Wall Bracket
Construction	on Features3	RFS	Firestop Spacer
		SFC	Single-Wall Flexible Gas Vent Connector 19
Type B Round Gas Vent Pipe & Fittings		DFC	Double-Wall Flexible Gas Vent Segment .19
RP	Round Pipe 3" through 12"4	Type B Ov	al Gas Vent Pipe & Fittings
R	Round Pipe 14" through 30"5		
RPA/R18A	Adjustable Length Pipe 6	OP	Oval Pipe
REA90	0-90° Adjustable Elbow 6	OPA	Adjustable Oval Pipe
REA60	60/45° Adjustable Elbow	OES45	Standard Elbow
R45	45° Elbow	OEF45	Flat Elbow21
REA45	45° Adjustable Elbow7	OT	Standard Oval Tee
RT	Tee8	OBC	Tee Support
RTC	Tee Cap8	OTC	Oval Tee Cap
RYF	Wye9	OAR	Oval-to-Round Adapter
RDH	Draft Hood Connector	OARA	Oval-to-Round Adapter
RHW	Rain Cap 3" through 8"10	RAO	Round-to-Oval Adapter
RWW	High Wind Cap10	OCP	Plate Spacers23
CU	Universal Cap 10" through 30" 10	OBPWS	Hold-Down Plate
С	Metal Cap 14" through 30"11	OFS	Firestop Spacers
UGVC	Universal Vent Cap11	OC	Oval Cap 4"
RN	Increaser12	ECW	Cap 4"25
RIX	Universal Increaser/Adapter12	OF	Oval Flashing
RIX	Increaser12	OSC	Oval Storm Collar25
RRA	Female Adapter		
RAA	Male Adapter	Type B Ga	s Vent Installations
RA	Male Adapter		
RF	Adjustable Roof Flashing Flat to 6/1214	Gas Applia	ance Chimney Liner Systems
RFA	Adjustable Roof Flashing 6/12 to 12/12 .14		
RTF	Tall Cone Roof Flashing15	ALK	Basic Kit27
RS	Storm Collar 3" through 6"	ALKE	Extension Kit
RS	Adjustable Storm Collar 7" through 12"15	ALK-FS	Insulated Sleeve
SC	Adjustable Storm Collar 14" through 30".16	ALK-FC	Flex Coupler28
RGS	Gripper Support 3" through 6" 16	FX-PD	Pull Down
FSP	Firestop Support 3" through 8" 17	ALK-VA	Adapters29
SP	Support Plate 10" through 30" 17	RLA	Female B-Vent Adapter
RPC	Pipe Collar 3" through 8"		
RWT	Wall Thimble18		

# **Hart & Cooley Type B Gas Vent**

### Safe. Durable. Easy to install. The total package.

#### Safety:

The Hart & Cooley® double-wall, air-insulated B-Vent system is secured by locking joints. Properly installed, the vent won't come apart through vibration, and offers protection against vent failure or fire hazard. Type B Gas Vent is designed for negative pressure applications and flue gas temperatures not exceeding 400°F above ambient for Category I appliances.

#### **Durability:**

By using high-quality materials and skilled workmanship, our galvanized outer pipe and aluminum inner pipe provide protection against corrosion and external damage.

#### **Easy and Secure Installation:**

Install with confidence! Hart & Cooley's simple two step engagement helps installers achieve installation quickly and easily. Simply engage pipe sections and secure by sliding the lock ring over security tabs. This unique system creates a strong connection without the use of screws. With our complete offering of fittings, supports, and caps, Hart & Cooley B-Vent is your most valuable teammate to complete any installation.

#### Warranty

Hart & Cooley warrants type-B gas vent for a period of twelve (12) months after shipment, ensuring product is free from material or workmanship defect under normal service and use for which the products were designed.

#### **Customer Service & Tech Support**

Have a question about a product or installation? Our customer service & technical support staff is readily available to take your call and make your job easier.

Checkout our website, which offers a convenient search tool and contains our entire line of products in a userfriendly format.

Hart & Cooley, LLC 4460 44th Street S.E., Suite F Grand Rapids, MI 49512

P (800) 433-6341 F (800) 223-8461


hartandcooley.com



Type B Gas Vent Link

### **Construction Features**

#### Sizes 3" to 12" diameters

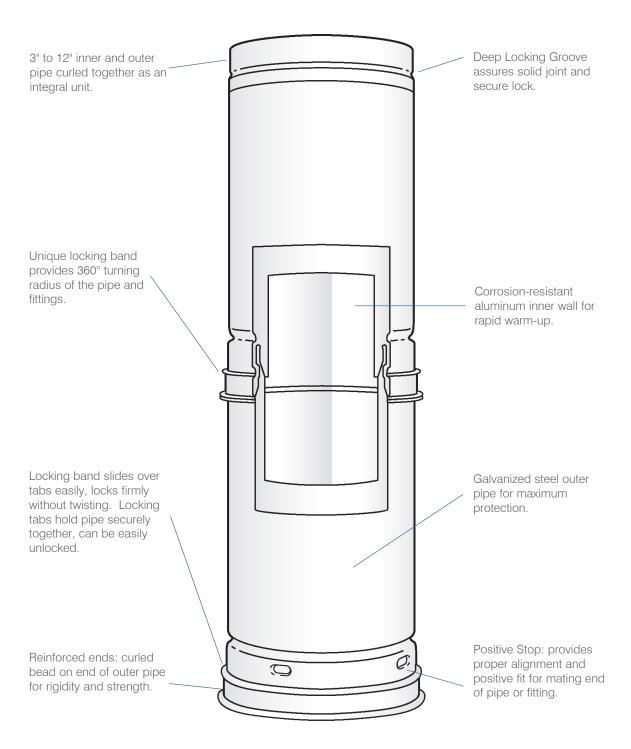



Hart & Cooley® B-Vent


complies with the latest Underwriters Laboratories Standard No. 441

# **Type B Round Gas Vent Pipe & Fittings**

#### Round Pipe - RP\*

3" through 12"





Lock-Ring Style

- Assembled length is the total length less overlap 3" to 12" has 1 3/8" overlap 14" to 30" has 1" overlap
- Outside Diameter (OD) Sizes 3" through 6" is size plus 1/2" Sizes 7" through 30" is size plus 1"
- The allowable minimum clearance to combustibles is 1"

Size	Model Number	Listed Length	Size	Model Number	Listed Length
	3RP6	6"		6RP6	6"
	3RP12	12"		6RP12	12"
	3RP18	18"		6RP18	18"
3"	3RP24	24"	6"	6RP24	24"
	3RP3	36"		6RP3	36"
	3RP4	48"		6RP4	48"
	3RP5	60"		6RP5	60"
	4RP6	6"		7RP12	12"
	4RP12	12"		7RP18	18"
4"	4RP18	18"	7"	7RP24	24"
	4RP24	24"	7	7RP3	36"
	4RP3	36"		7RP4	48"
	4RP4	48"		7RP5	60"
	4RP5	60"		8RP12	12"
	5RP6	6"		8RP18	18"
	5RP12	12"	8"	8RP24	24"
	5RP18	18"	ō	8RP3	36"
5"	5RP24	24"		8RP4	48"
	5RP3	36"		8RP5	60"
	5RP4	48"		10RP18	18"
	5RP5	60"	10"	10RP24	24"
			10"	10RP3	36"
				10RP5	60"
				12RP18	18"

12"

12RP24


12RP3

24"

36"

Round Pipe - R\*
14" through 30"






Snap-Lock Style

Size	Model Number	Listed Length
	14R12	12"
	14R18	18"
14"	14R24	24"
	14R3	36"
	16R12	12"
4.011	16R18	18"
16"	16R24	24"
	16R3	36"
	18R12	12"
10!!	18R18	18"
18"	18R24	24"
	18R3	36"
	20R12	12"
20"	20R18	18"
20"	20R24	24"
	20R3	36"
	22R12	12"
22"	22R18	18"
22	22R24	24"
	22R3	36"
	24R12	12"
24"	24R18	18"
24	24R24	24"
	24R3	36"
	26R12	12"
26"	26R18	18"
20	26R24	24"
	26R3	36"
	28R12	12"
28"	28R18	18"
20	28R24	24"
	28R3	36"
	30R12	12"
30"	30R18	18"
30	30R24	24"
	30R3	36"

# Adjustable Length Pipe - RPA\*/R18A






- 12" length is adjustable 1" to 10"
- 18" length is adjustable 1" to 16"

Model Number	Size	Listed Length
3RPA	3"	12"
4RPA	4"	12"
5RPA	5"	12"
6RPA	6"	12"
7RPA	7''	18"
8RPA	8"	18"
10RPA	10"	18"
12RPA	12"	18"
14R18A	14"	18"
16R18A	16"	18"
18R18A	18"	18"
20R18A	20"	18"
22R18A	22"	18"
24R18A	24"	18"
26R18A	26"	18"
28R18A	28"	18"
30R18A	30"	18"

### Adjustable Elbow - REA90\*

0-90°



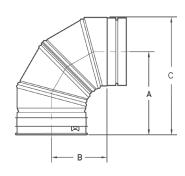


Model Number	Size	А	В	С
3REA90	3 ½"	5 ½"	3 ¾"	7 1/4"
4REA90	4"	6"	4 1/4"	8 1/4"
5REA90	5"	6 ½"	4 3/4"	9 1/4"
6REA90	6"	7"	5 1/4"	10 1/4"
7REA90	7"	7 3/4"	6"	11 ¾"
8REA90	8"	8 1/4"	6 ½"	12 ¾"

### Adjustable Elbow - REA60\*

60/45°



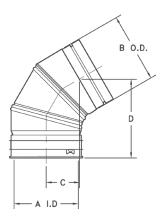


Model Number	Size	A I.D.	B O.D.	С	D
3REA60	3"	3"	3 ½"	1 1/8"	5 1/4"
4REA60	4"	4"	4 ½"	2 1/8"	5 ½"
5REA60	5"	5"	5 ½"	2 1/4"	6"
6REA60	6"	6"	6 ½"	2 5/8"	6 3/8"

### **Adjustable Elbow** - REA45\*

45°



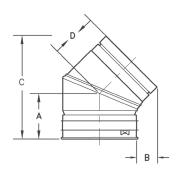


Model Number	Size	A	В	С	D
7REA45	7"	$4^{3}/8$ "	2 5/8"	10 ³/s"	4 3/4"
8REA45	8"	$4^{5}/8$ "	2 7/8"	11 1/8"	4 3/4"
10REA45	10"	5"	3 1/4"	12 3/4"	4 3/4"
12REA45	12"	5 ½"	3 ¾"	13 ¾"	4 3/4"

#### **Elbow** - R45\*

45°




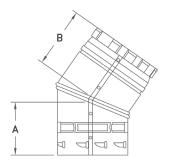

- 14" elbow is adjustable
- 16" through 30" elbows are fixed

Model Number	Size	A	В
14R45	14"	6 5/8"	6 ½"
16R45	16"	7"	7"
18R45	18"	7 9/16"	7 ½"
20R45	20"	8 1/2"	8 5/8"
22R45	22"	8"	7 5/8"
24R45	24"	8 5/8"	8 5/16"
26R45	26"	9"	9"
28R45	28"	9 1/2"	9 1/2"
30R45	30"	10"	10"

Tee - RT\*

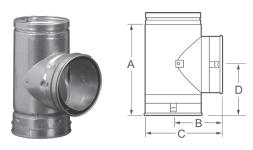

Model Number	Size	A	В	С	D
3RT3	3" x 3" x 3"	7 ½"	4 ½"	6 1/4"	4 ½"
4RT4	4" x 4" x 4"	8 ½"	5"	7 1/4"	5"
5RT5	5" x 5" x 5"	9 1/2"	5 ½"	8 1/4"	5 ½"
5RT4	5" x 5" x 4"	9 ½"	5 ½"	8 1/4"	5 ½"
5RT3	5" x 5" x 3"	9 1/2"	5 ½"	8 1/4"	5 ½"
6RT6	6" x 6" x 6"	10 ½"	6"	9 1/4"	6''
6RT4	6" x 6" x 4"	10 ½"	6"	9 1/4"	6''
6RT3	6" x 6" x 3"	10 ½"	6"	9 1/4"	6''
7RT7	$7" \times 7" \times 7"$	11 ½"	6 ½"	10 ¾"	6 3/4"
8RT8	8" x 8" x 8"	12 ½"	7"	11 ¾"	7 1/4"
10RT10	10" x 10" x 10"	14 ½"	8"	13 ¾"	8 1/4"
12RT12	12" x 12" x 12"	16 ½"	9"	15 ¾"	9 1/4"
14RT	14" x 14" x 14"	24"	11 ¾"	19 1/4"	12"
16RT	16" x 16" x 16"	26"	13"	21 ½"	13 1/4"
18RT	18" x 18" x 18"	28 ½"	14 1/4"	23 ¾"	14 ½"
20RT	20" x 20" x 20"	30"	15 ½"	26"	15 ¾"
22RT	22" x 22" x 22"	33"	16 ¾"	281/4"	17''
24RT	24" x 24" x 24"	36"	18"	30 ½"	18 1/4"
26RT	26" x 26" x 26"	38"	19"	32 ½"	19 1/4"
28RT	28" x 28" x 28"	40''	20"	34 ½"	20 1/4"
30RT	30" x 30" x 30"	42"	21"	36 ½"	21 1/4"


Tee Cap - RTC



Model Number	Diameter Size
3RTC	3"
4RTC	4"
5RTC	5"
6RTC	6"
7RTC	7"
8RTC	8"
10RTC	10"
12RTC	12"
14RTCP	14"
16RTCP	16"
18RTCP	18"
20RTCP	20"
22RTCP	22"
24RTCP	24"
26RTCP	26"
28RTCP	28"
30RTCP	30"

Wye - RYF\*




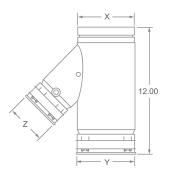

Model Number	Size X / Y / Z
4RYF33	4" / 3" / 3"
4RYF44	4" / 4" / 4"
4RYF43	4" / 4" / 3"
5RYF53	5" / 5" / 3"
5RYF54	5" / 5" / 4"
5RYF43	5" / 4" / 3"
5RYF44	5" / 4" / 4"
6RYF54	6" / 5" / 4"
6RYF53	6" / 5" / 3"
6RYF43	6" / 4" / 3"
6RYF44	6" / 4" / 4"
6RYF63	6" / 6" / 3"
6RYF64	6" / 6" / 4"

### **Draft Hood Connector** - RDH\*






Model Number	Size	А	В
3RDH	3"	$4^{1/2}$ "	6''
4RDH	4''	$4^{1/2}$ "	6''
5RDH	5"	$4^{1/2}$ "	6"
6RDH	6''	$4^{1/2}$ "	6"
7RDH	7''	7"	8 1/2"
8RDH	8"	7"	8 1/2"
10RDH	10"	7"	8 1/2"
12RDH	12"	7"	8 1/2"

#### Rain Cap - RHW\*

3" through 8"






- Prevents rain and debris from entering the vent
- Single locking tab to securely connect to Type B
- External screen prevents entry of birds

Model Number	Size	А	В
3RHW	3"	6''	3 1/4"
4RHW	4"	8"	4 1/4"
5RHW	5"	10"	5 1/4"
6RHW	6"	12"	6 1/4"
7RHW	7"	14"	7 ½"
8RHW	8"	16"	8 1/2"

### High Wind Cap - RWW\*

3" through 6"






Model Number	Size	А	В
3RWW	3"	8"	5 ½"
4RWW	4"	10"	6"
5RWW	5"	12"	7''
6RWW	6''	14"	7 ½"

- Prevents rain & debris from entering the vent
- Two Locking Tabs ensure a secure connection even in high wind environments
- Used in high wind conditions without sacrificing draft and safety or risking pilot light blow out

#### Universal Cap - CU\*

10" through 30"






- Barriers provided in cap opening spaced less than 1" are designed to resist entry of birds
- Slips into most B-Vent

Model Number	Size	A	В
10CU	10"	15 3/4"	7 1/2"
12CU	12"	19"	9"
14CU	14"	22"	11"
16CU	16"	25"	12"
18CU	18"	28 1/4"	13 1/2"
20CU	20"	31 1/2"	15"
22CU	22"	34 1/2"	16 1/2"
24CU	24"	37 3/4"	18"
26CU	26"	42"	19 1/2"
28CU	28"	44"	21"
30CU	30"	48"	22 1/2"

### Metal Cap - C\*

14" through 30"






- Barriers provided in cap opening spaced less than 1" are designed to resist entry of birds
- Snap-locks onto pipe

Model Number	Size	A	В
14C	14"	22"	11"
16C	16"	25"	12"
18C	18"	28 1/4"	13 1/2"
20C	20"	31 1/2"	15"
22C	22"	34 1/2"	16 1/2"
24C	24"	37 3/4"	18"
26C	26"	42"	19 1/2"
28C	28"	44"	21"
30C	30"	48"	22 1/2"

#### **Universal Vent Cap**






Order #	Description	Fits O.D.	Case Qty	A	В
34UGVC	3"-4" Universal Vent Cap	3" - 4.5"	6	8"	5"
56UGVC	5"-6" Universal Vent Cap	5" - 6.5"	6	11"	7 ½"
78UGVC	7"-8" Universal Vent Cap	7" - 8.5"	4	15"	8 1/4"

- Convenient solution for a variety of rooftop vent, flue\*, and B-vent installations
- Self-centering, adjustable design means a quick, easy installation
- Worm Gear Clamp with one-tool adjustability
- Three sizes fit pipes with outside diameters from 3"
- Helps prevent rain, debris, and most birds from entering the vent
- Aluminum construction for rust and corrosion resistance
- Includes separate instruction sheet
- Listings: UL 441 and CAN/ULC-605

<sup>\*</sup>Not for use with solid fuel flues

#### Increaser - RN\*





ı	Model Number	Size	A	В
	3RN4	3" to 4"	3 3/4"	5 1/4"
	3RN5	3" to 5"	3 3/4"	5 1/4"
	3RN6	3" to 6"	3 3/4"	5 1/4"
	3RN7	3" to 7"	3 3/4"	5 1/4"
	4RN5	4" to 5"	3 3/4"	5 1/4"
	4RN6	4" to 6"	3 3/4"	5 1/4"
	4RN7	4" to 7"	3 3/4"	5 1/4"
	5RN6	5" to 6"	3 3/4"	5 1/4"
	6RN7	6" to 7"	3 3/4"	5 1/4"
	6RN8	6" to 8"	3 3/4"	5 1/4"
	7RN8	7" to 8"	3 7/8"	5 3/8"
	8RN10	8" to 10"	3 7/8"	5 3/8"
	8RN12	8" to 12"	3 7/8"	5 3/8"
	10RN12	10" to 12"	3 7/8"	5 3/8"

### Universal Increaser/Adapter - RIX\*



Adapts and increases from locking ring style, small-diameter vent pipe to snap-lock large-diameter vent pipe

Model Number	Diameter Size
8RIX14U	8" to 14"
10RIX14U	10" to 14"
10RIX16U	10" to 16"
10RIX18U	10" to 18"
12RIX14U	12" to 14"
12RIX16U	12" to 16"
12RIX18U	12" to 18"
12RIX20U	12" to 20"

#### Increaser - RIX\*




Model Number	Diameter Size
14RIX16	14" to 16"
14RIX18	14" to 18"
16RIX18	16" to 18"
14RIX20	14" to 20"
16RIX20	16" to 20"
18RIX20	18" to 20"
14RIX22	14" to 22"
16RIX22	16" to 22"
18RIX22	18" to 22"
20RIX22	20" to 22"
16RIX24	16" to 24"
18RIX24	18" to 24"
20RIX24	20" to 24"

Model Number	Diameter Size
22RIX24	22" to 24"
18RIX26	18" to 26"
20RIX26	20" to 26"
22RIX26	22" to 26"
24RIX26	24" to 26"
20RIX28	20" to 28"
22RIX28	22" to 28"
24RIX28	24" to 28"
26RIX28	26" to 28"
22RIX30	22" to 30"
24RIX30	24" to 30"
26RIX30	26" to 30"
28RIX30	28" to 30"

### Female Adapter - RRA\*






Model Number	Size	A. I.D.	В
3RRA	3"	3 3/4"	6"
4RRA	4"	4 3/4"	6"
5RRA	5"	5 3/4"	6"
6RRA	6"	6 3/4"	6"

Adapts Hart & Cooley vent to other brands of B-Vent (ours to theirs)

### Male Adapter - RAA\*







Adapts thicker wall brands of B-Vent to Hart & Cooley vent (theirs to ours)

Model Number	Size	A I.D.	В
3RAA	3"	3 11/16"	6''
4RAA	4"	4 11/16"	6''
5RAA	5"	5 11/16"	6''
6RAA	6"	6 11/16"	6''
7RAA	7"	7 11/16"	8 1/2"
8RAA	8"	8 11/16"	8 1/2"

#### Male Adapter - RA\*







Model Number	Size	A I.D.	B Dim.
3RA	3"	3 9/16"	6"
4RA	4"	4 9/16"	6"
5RA	5"	5 9/16"	6"
6RA	6"	6 9/16"	6"
7RA	7"	7 9/16"	17 3/4"
8RA	8"	8 9/16"	17 3/4"

Adapts other brands of B-Vent to Hart & Cooley vent (theirs to ours)

Competitive	Pipe	Airspace	Adapter	Model
Manufacturer	Diameter		Male	Female
Selkirk	3" - 6"	1/ <sub>4</sub> "	RA or RPA†	RRA
	7" - 8"	1/ <sub>4</sub> "	RA	-
Metal Fab	3" - 6"	1/ <sub>4</sub> "	RA or RPA†	RRA
	7" - 8"	1/ <sub>2</sub> "	RPA	-
AmeriVent	3" - 6"	1/4"	RA or RPA†	RRA
	7" - 8"	1/2"	RPA	-
Air-Jet	3" - 6" 7" - 8"	3/8" 3/8"	RAA RAA	-
DuraVent	3" - 6"	5/ <sub>16</sub> "	RAA	RRA
	7" - 8"	5/ <sub>16</sub> "	RAA	-

†RPA, the Adjustable Length, can be found on page 6

### Adjustable Roof Flashing - RF

Flat to 6/12



Model Number	Size	A	В	С
3RF	3"	3"	6 1/8"	4 1/8"
4RF	4"	3 1/4"	7 3/8"	$4^{1}/8''$
5RF	5"	3 1/2"	8 5/8"	$4^{3/4}$ "
6RF	6"	3 3/4"	10"	5 1/4"
7RF	7"	4"	11 1/8"	6 3/8"
8RF	8"	4 1/4"	13 1/8"	6 3/4"
10RF	10"	4 3/4"	15 <sup>5</sup> /8"	7 1/2"
12RF	12"	4 3/4"	18"	8"
14RF	14"	5 1/4"	21"	9 1/4"
16RF	16"	5 1/4"	23 1/4"	9 1/2"
18RF	18"	5 3/4"	25 <sup>7</sup> /s"	10 1/2"
20RF	20"	5 3/4"	28 1/8"	11"
22RF	22"	6 1/4"	30 5/8"	12"
24RF	24"	6 1/4"	32 7/8"	12 1/2"
26RF	26"	NA	NA	12"
28RF	28"	NA	NA	12"
30RF	30"	NA	NA	13"

### Adjustable Roof Flashing - RFA

6/12 to 12/12



Model Number	Size	A	В	С
3RFA	3"	5 1/2"	6"	7 1/4"
4RFA	4"	5 3/8"	7 3/8"	7 9/16"
5RFA	5"	5 5/8"	8 5/8"	8 5/8"
6RFA	6"	5 3/8"	10"	8 13/16"
7RFA	7"	5 3/8"	11 <sup>7</sup> /s"	9 3/4"
8RFA	8"	5 1/4"	13"	10 1/16"

### Tall Cone Roof Flashing - RTF




Model Number	Size	A	В
3RTF	3"	11"	7 1/2"
4RTF	4"	11"	7 1/2"
5RTF	5"	11"	7 1/2"
6RTF	6"	11"	7 1/2"
7RTF	7''	11"	11"
8RTF	8"	11"	11"
10RTF	10"	11"	16"
12RTF	12"	11"	16"
14RTF	14"	11"	19 1/4"
16RTF	16"	11"	19 1/4"
18RTF	18"	11"	23 5/8"
20RTF	20"	11"	23 5/8"
22RTF	22"	11"	27 <sup>5</sup> /s"
24RTF	24"	11"	27 <sup>5</sup> /s"
26FT	26"	11"	31 9/16"
28FT	28"	11"	31 9/16"
30FT	30"	11"	31 9/16"

#### Storm Collar - RS

3" through 6"



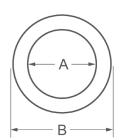


Model Number	Size	A	В
3RS	3"	3 1/2"	6 5/8"
4RS	4"	4 1/2"	7 5/8"
5RS	5"	5 1/2"	8 5/8"
6RS	6"	6 1/2"	9 5/8"

# **Adjustable Storm Collar** - RS

7" through 12"



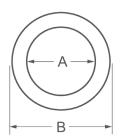


Model Number	Size	A	В
7RS	7"	8"	10 <sup>7</sup> /s"
8RS	8"	9"	11 <sup>7</sup> /s"
10RS	10"	11"	$14^{1}/2''$
12RS	12"	13"	16 1/2"

### Adjustable Storm Collar - SC

14" through 30"






- Designed to be snug around vent pipe for a weather-tight fit
- For use with roof flashing and caulk

Model Number	Size	A	В
14SC	14"	15"	18 <sup>7</sup> /s"
16SC	16"	17"	21 1/4"
18SC	18"	19"	23 1/4"
20SC	20"	21"	25 15/16"
22SC	22"	23"	28 5/16"
24SC	24"	25"	30 11/16"
26SC	26"	27"	33 1/16"
28SC	28"	29"	35 1/16"
30SC	30"	31"	37 1/16"

### **Gripper Support** - RGS\*

3" through 10"



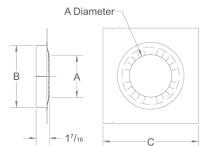



Model Number	Size	A	В	С
3RGS	3"	3 1/2"	5 1/2"	9"
4RGS	4"	4 1/2"	6 1/2"	10"
5RGS	5"	5 1/2"	7 1/2"	11"
6RGS	6"	6 1/2"	8 1/2"	12"
7RGS	7"	7 1/2"	-	13"
8RGS	8"	8 1/2"	-	14"
10RGS	10"	10 1/2"	-	16"

- Supports 30' of pipe
- Acts as a firestop
- 7", 8" and 10" not UL-listed

# Firestop Support - FSP\*

3" through 8"

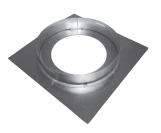






- Supports 20' of pipe
- Acts as a firestop


Model Number	Size	А	В	С	D
3FSP	3"	3 5/8"	7 ½"	3 ½"	5 ½"
4FSP	4''	4 5/8"	8 ½"	4 ½"	6 ½"
5FSP	5"	5 5/8"	9 ½"	5 ½"	7 ½"
6FSP	6''	6 5/8"	10 ½"	6 1/2"	8 ½"
7FSP	7''	8 1/8"	12"	8"	10"
8FSP	8''	9 1/8"	13"	9"	11"



### Support Plate - SP\*

10" through 30"



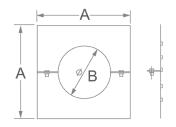


• Supports 30' of pipe

Model Number	Size	А	В
10SP	10"	18"	10 5/8"
12SP	12"	20"	12 5/8"
14SP	14"	22"	14 5/8"
16SP	16"	24"	16 5/8"
18SP	18"	26"	18 5/8"
20SP	20"	28"	20 5/8"
22SP	22"	30"	22 5/8"
24SP	24"	32"	24 5/8"
26SP	26"	34"	26 5/8"
28SP	28"	36"	28 5/8"
30SP	30"	38"	30 5/8"

### Pipe Collar - RPC

3" through 8"






• To cover a rough opening

Model Number	Size	А	В
3RPC	3"	3 5/8"	8 3/4"
4RPC	4"	4 5/8"	8 3/4"
5RPC	5"	5 <sup>5</sup> / <sub>8</sub> "	10 7/8"
6RPC	6"	6 5/8"	12 7/8"
7RPC	7"	8 1/8"	$14^{7}/s$ "
8RPC	8"	9 1/8"	16 <sup>7</sup> /8"

#### Wall Thimble - RWT



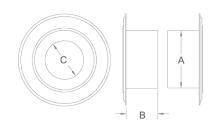


Model Number	Size	А	В	С
3RWT	3"	5 1/2"	3 1/16"	3 9/16"
4RWT	4"	6 1/2"	3 1/16"	4 9/16"
5RWT	5"	7 1/2"	3 1/16"	5 9/16"
6RWT	6"	8 1/2"	3 1/4"	6 9/16"
7RWT	7"	10"	3 1/4"	8 1/16"
8RWT	8"	11"	3 1/4"	9 1/16"


- Provides necessary clearance to combustibles
- Sleeve is adjustable from 3" to 6"

#### Wall Bracket - RWB



Model Number	Size	A	В	С
3RWB	3"	3"	3 1/2"	3 1/4"
4RWB	4"	4"	$4^{1/2}$ "	3 3/4"
5RWB	5"	5"	5 1/2"	4 1/4"
6RWB	6"	6"	6 1/2"	4 3/4"
7RWB	7''	7"	8"	5 1/2"
8RWB	8"	8"	19 <sup>5</sup> /8"	6 5/8"
10RWB	10"	10"	21 11/16"	7 13/16"
12RWB	12"	12"	23 3/4"	9"

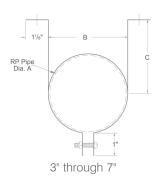

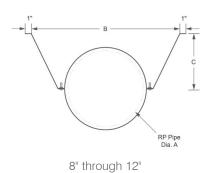

- Available in 3" through 12"
- 8" through 12" bracket used with perforated pipe strap supplied by others


#### Single-Wall Flexible Gas Vent Connector - SFC



- Single-wall flexible construction
- Includes an integral appliance draft hood connector for fast installation
- Locks onto Hart & Cooley type-B gas vent
- Requires 1" clearance to combustibles per installation instructions
- UL-listed for use as a connection from an appliance to type-B gas vent in conditioned spaces only
- Do not enclose
- Available in 3" through 5" diameters and 1' through 5' lengths

Diameter	Model Number	Length
	3SFC12	12"
	3SFC24	24"
3"	3SFC3	36"
	3SFC4	48"
	3SFC5	60"
	4SFC12	12"
	4SFC24	24"
4"	4SFC3	36"
	4SFC4	48"
	4SFC5	60"
	5SFC12	12"
5"	5SFC24	24"
	5SFC3	36"
	5SFC4	48"
	5SFC5	60"

### **Double-Wall Flexible Gas Vent Segment** - DFC

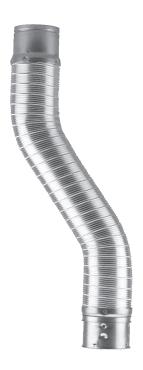


- Features double-wall, air-insulated construction
- Has type-B male/female ends for easy connection with Hart & Cooley B-Vent
- Requires 1" clearance to combustibles
- UL-listed for use as a connection from an appliance to type-B gas vent and as a segment of type-B gas vent
- Can be used in unconditioned spaces, such as attics and crawl spaces
- Do not enclose
- Available in 3" through 5" diameters and 2' through 5' lengths

Diameter	Model Number	Length
	3DFC24	24"
3"	3DFC3	36"
3	3DFC4	48"
	3DFC5	60"
	4DFC24	24"
4"	4DFC3	36"
4	4DFC4	48"
	4DFC5	60"
	5DFC24	24"
5"	5DFC3	36"
	5DFC4	48"
	5DFC5	60"

### Type B Oval Gas Vent Pipe & Fittings

#### Oval Pipe - OP

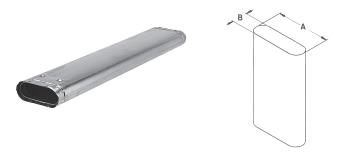

Type B Sizes 4" and 5" may be installed with 1" minimum clearance to combustibles.

#### Type BW (recessed heater)

4" oval vent (when installed in 2 x 4 stud wall with recessed heater) requires clearances as determined by use of 4OBPWS hold-down plate, 4OCP ceiling plate spacers, and 4OFS firestop spacers.

#### Type B 2x4

4" and 5" oval vent (when installed in 2 x 4 stud wall, not using a recessed heater) requires clearance as determined by use of 4OFS or 5OFS firestop spacers at each ceiling level.

Model Number	Size	A	В
4OP6	4"	7 1/16"	2 <sup>7</sup> /s"
4OP12	4"	7 1/16"	2 <sup>7</sup> /s''
4OP18	4"	7 1/16"	2 <sup>7</sup> /s"
4OP24	4"	7 1/16"	2 <sup>7</sup> /s''
4OP3	4"	7 1/16"	2 <sup>7</sup> /s''
4OP4	4"	7 1/16"	2 <sup>7</sup> /s''
4OP5	4"	7 1/16"	2 <sup>7</sup> /s"
5OP18	5"	10 3/4"	2 <sup>7</sup> /s"
5OP24	5"	10 3/4"	2 <sup>7</sup> /s"
5OP3	5"	10 3/4"	2 7/8"
5OP4	5"	10 3/4"	2 <sup>7</sup> /s"
5OP5	5"	10 3/4"	2 <sup>7</sup> /s"

- Oval Pipe overlaps 13/8" when joined together; therefore, assembled length is 13/8" less than listed length.
- Offers all the advantages of round pipe, and may be used for the following types of installation.

4" Oval:

Conventional Type B

Type B-2x4 when used with firestop Type BW-2x4 with recessed heater

5" Oval:

Type B

Type B-2x4

#### Adjustable Oval Pipe - OPA



#### Sizes for 12" Lengths:


4", 5" (adjustable from 3" to 10")

Model Number	Size
4OPA	4"
5OPA	5"

- Telescopes onto oval pipe sections
- Adjusts from 3" to 10"

#### Standard Elbow - OES45






Model Number	Size	A	В
4OES45	4"	3"	3"
5OES45	5"	3 1/2"	3 1/2"

- Used in pairs where offsets are desired in 1" minimum clearance enclosures or open spaces, such as attics or basements
- Add pipe sections between pairs to produce additional offset

#### Flat Elbow - OEF45



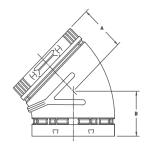


Model Number	Size	А	В
4OEF45	4"	3 3/4"	3 3/4"
5OEF45	5"	4 3/4"	4 3/4"

- Used in pairs where offsets are desired in 1" minimum clearance enclosures or open spaces, such as attics or basements
- Add pipe sections between pairs to produce additional offset

#### Standard Oval Tee - OT






Model Number	Size	А	В	С
4OT	4"	12"	2 9/16"	2 <sup>3</sup> /s"
5OT	5"	12"	2 9/16"	2 3/8"

- The branch size and trunk size have the same diameter
- The tee branch accepts either double-wall or single-wall pipe

# Tee Support - OBC





Model Number	Size	A	В
4OBC	4"	3"	$11^{1/2}$ "
5OBC	5"	3"	12 <sup>7</sup> /s"

- Supports and centers the tee
- Use with the tee cap shown below

### Oval Tee Cap - OTC




Model Number	Size
4OTC	4"
5OTC	5"

Used to close off the bottom of the tee

# Oval-to-Round Adapter - OAR\*






Model Number	Size	A Dim.
4OAR	4"	11 3/8"

Adapts from oval to lock-ring style round B-Vent

#### Oval-to-Round Adapter - OARA



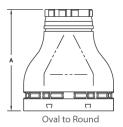


Model Number	Size	A
4OARA	4"	6 <sup>7</sup> /s"
5OA5RA	5"	9 3/8"

- Used for conversion of vent from oval to round
- Requires use of RAA male adapter to continue with round

### Round-to-Oval Adapter - RAO



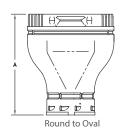


Model Number	Size	A
4RAO	4"	6 <sup>7</sup> /8"
5RA5O	5"	9 3/8"

- Used for conversion of vent from round to oval
- Requires use of RRA female adapter to come from round

#### Plate Spacers - OCP




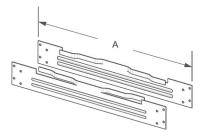

Model Number	Size	A
4OCP	4"	17 1/2"

- Required at the first ceiling level above a wall furnace to center and space vent properly and to provide the required opening between floors
- Firestop spacers must be used at subsequent levels


#### Hold-Down Plate - OBPWS

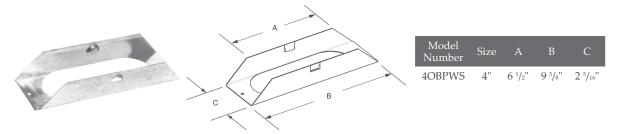

Required for connecting Type-BW vent to a wall furnace outlet

### Firestop Spacers - OFS



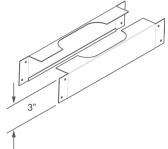

Model Number	Size	Wall
4OFS	4"	2" x 4"
5OFS	5"	2" x 4"
4OFS6	4"	2" x 6"

- Centers oval vent in 16" O.C. stud space
- Serves as a firestop at the ceiling level
- Required component for Type-B 2 x 4 and multi-story Type-BW installations

### Oval Cap - OC



Model Number	Size	A	В
OC	4"	$5^{3}/8" \times 8^{1}/2"$	3 1/2"


Cap - ECW



Model Number	Size	A	В
5ECW	5"	9 7/8"	5 5/16"

Use with 5" Oval to Round Adapter, 50A5RA

### Oval Flashing - OF

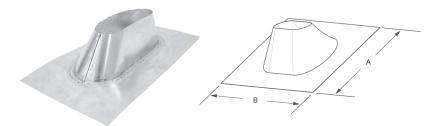

Model Number	Size	A	В
4OF	4"	17 <sup>7</sup> /s"	13 1/2"
5OF	5"	23"	14"

- Installed either parallel or perpendicular to the roof ridge
- Fits roof pitches flat to 5/12


#### Oval Storm Collar - OSC




Model Number	Size
4OSC	4"
5OSC	5"

Serves as a counter flashing and requires mastic to seal to the vent pipe

# **Type B Gas Vent Installations**

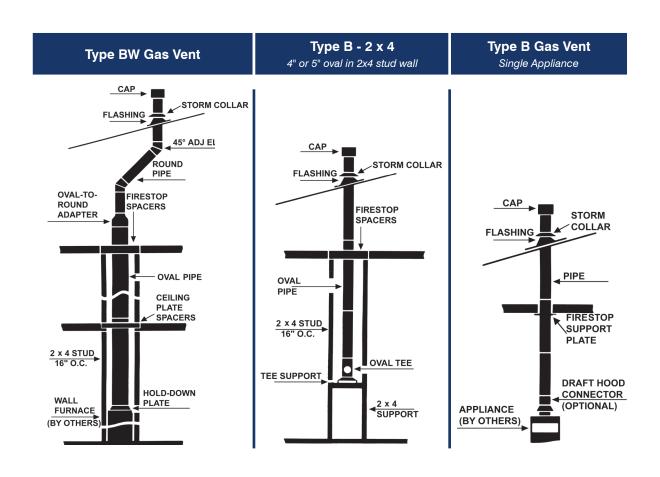

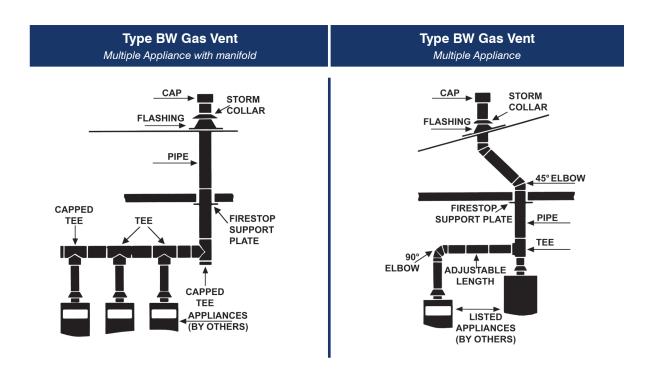

# **Gas Appliance Chimney Liner Systems**

#### Basic Kit - ALK



- Available in 3", 4", 5", 5.5", 6", 7" and 8" diameters
- Available in 15', 25' and 35' lengths
- Listed to: UL1777 and ULC-S635
- Compatible with type-B gas vent systems
- Kit includes length, round top, flashing with 3" collar, mortar guard, fasteners and instructions

Model Number	Size	Length
3ALK15	3"	15'
3ALK25	3"	25'
3ALK35	3"	35'
4ALK15	4"	15'
4ALK25	4"	25'
4ALK35	4"	35'
5ALK15	5"	15'
5ALK25	5"	25'
5ALK35	5"	35'
55ALK25	5 ½"	25'
55ALK35	5 ½"	35'
6ALK25	6"	25'
6ALK35	6"	35'
7ALK25	7''	25'
7ALK35	7''	35'
8ALK25	8"	25'
8ALK35	8"	35'

#### **Extension Kit** - ALKE



- 10' flexible liner length
- Includes coupler and fastener package
- **UL-listed**

Model Number	Size	Length
3ALKE10	3"	10'
4ALKE10	4"	10'
5ALKE10	5"	10'
55ALKE10	5 ½"	10'
6ALKE10	6"	10'
7ALKE10	7"	10'
8ALKE10	8"	10'

#### **Insulated Sleeve - ALK-FS**




Model Number	Size
4ALK-FS	3" - 4"
5ALK-FS	5"
6ALK-FS	5 1/2" - 6"
7ALK-FS	7"
8ALK-FS	8"

- Insulation sleeve with tough poly exterior
- Cable ties included

### Flex Coupler - ALK-FC



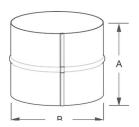

For fitting or joining ALK liner lengths

Model Number	Size	А	В
3ALK-FC	3"	4"	2.97"
4ALK-FC	4"	4"	3.97"
5ALK-FC	5"	4"	4.97"
55ALK-FC	5 1/2"	4"	5.47"
6ALK-FC	6"	4"	5.97"
7ALK-FC	7''	4"	6.97"
8ALK-FC	8"	4"	7.97"


#### Pull Down - FX-PD



Used to stretch and lead ALK liner down chimney

Model Number	Size
3FX-PD	3"
4FX-PD	4"
5FX-PD	5"
55FX-PD	5 1/2"
6FX-PD	6"
7FX-PD	7''
8FX-PD	8"

### Adapters - ALK-VA

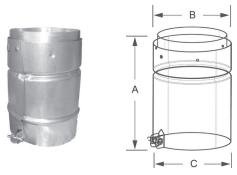

Adapter to transition from all brands of listed type-B Gas Vent to ALK Liner

Model Number	Size	А	В	С
3ALK-VA	3"	5.88"	2.95"	3.57"
4ALK-VA	4"	5.88"	3.95"	4.57"
5ALK-VA	5"	5.88"	4.95"	5.57"
6ALK-VA	6"	5.88"	5.95"	6.57"
7ALK-VA	7''	5.88"	6.95"	8.57"
8ALK-VA	8"	5.88"	7.95"	9.57"

### Female B-Vent Adapter - RLA



Sold separately; not part of kit

Model Number	Size	A	В
3RLA	3"	3"	5 <sup>5</sup> / <sub>8</sub> "
4RLA	4"	4"	5 <sup>5</sup> / <sub>8</sub> "
5RLA	5"	5"	5 <sup>5</sup> / <sub>8</sub> "
6RLA	6"	6"	5 <sup>5</sup> / <sub>8</sub> "
7RLA	7''	7"	5 <sup>5</sup> / <sub>8</sub> "
8RLA	8"	8"	5 5/8"



#### **BUILD FOR THE FUTURE**

Customer Service and Support:	
Airmate (USA)	
Ameriflow	800.252.8467
Amerivent (Retail) Amerivent (Wholesale) Amerivent (Support)	. 800.423.4270
AMPCO (USA)	
Duravent	. 800.835.4429
Hart & CooleyHart & Cooley (Support)	
Heatfab (USA) Heatfab (CAN)	
Lima	. 800.423.4270
Milcor	800.774.5240
Portals Plus	800.774.5240
RPS	.800.624.8642
Security Chimney (USA) Security Chimney (CAN)	
Selkirk (USA) Selkirk (CAN) Selkirk (Support)	.888.735.5475

#### Manufacturing & Distribution Centers:

CANADA

Nobel, ON Manufacturing
Laval, QC Manufacturing
Prescott, ON Distribution

**USA** 

Grand Rapids, MI Center of Excellence

Dallas, TX Distribution
Englewood, OH Distribution

Huntsville, AL Manufacturing & Distribution
Nampa, ID Manufacturing & Distribution
Turner Falls, MA Manufacturing & Distribution

Vacaville, CA Manufacturing

**MEXICO** 

Ojinaga, MX Manufacturing Mexicali, MX Manufacturing

#### Corporate Headquarters:

Duravent Group 28 W. Adams, Suite 1810 Detroit, MI 48226 Tel: 800.835.4429

Email: info@duraventgroup.com

www.duraventgroup.com





BUILD FOR THE FUTURE

www.duraventgroup.com











For warranty information: Scan this QR code or visit www.duraventgroup.com/warranties